Connection Somfy engines

Somfy Orea RTS | Somfy Sunea io | Somfy Maestria+ io | Somfy Pergola 60 io RGS

Orea RTS | Sunea io | Maestria+ io | Pergola 60 io RGS

Pin connection with Hirschmann STAK – STAS3

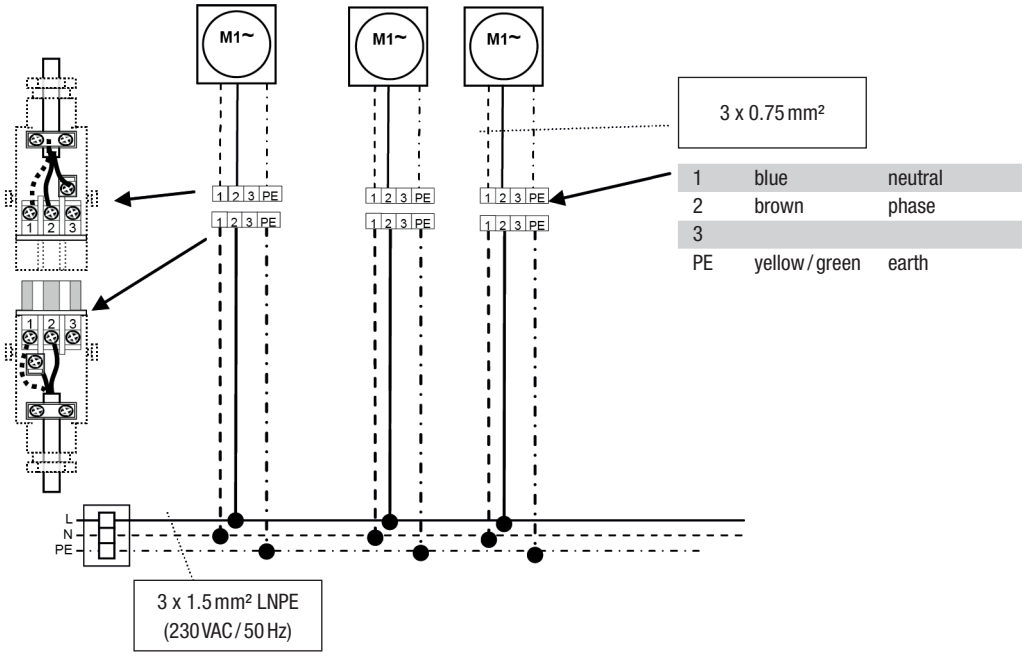

Orea RTS | Sunea io | Maestria+ io | Pergola 60 io RGS

Pin connection without Hirschmann STAK – STAS3

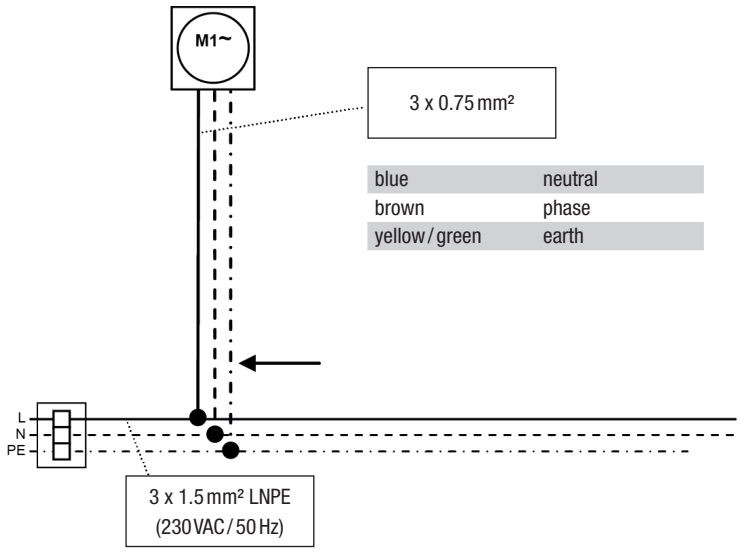

 All rights for technical modification are reserved © STOBAG 2024-06

STOBAG

Connection Somfy engines

Somfy Orea WT | Somfy LT | Somfy Maestria+ WT

Orea WT | LT | Maestria+ WT

Pin connection with Hirschmann STAK – STAS3 / max. 3 motor in parallel

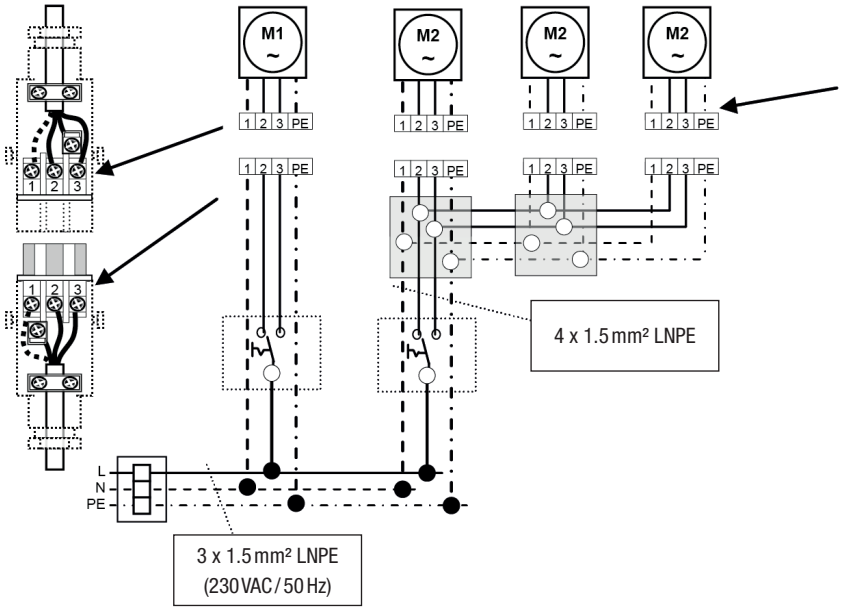

1	blue	neutral
2	black	up or down
3	brown	up or down
PE	yellow / green	earth

LT | Maestria+ WT

Pin connection with Hirschmann STAK – STAS3

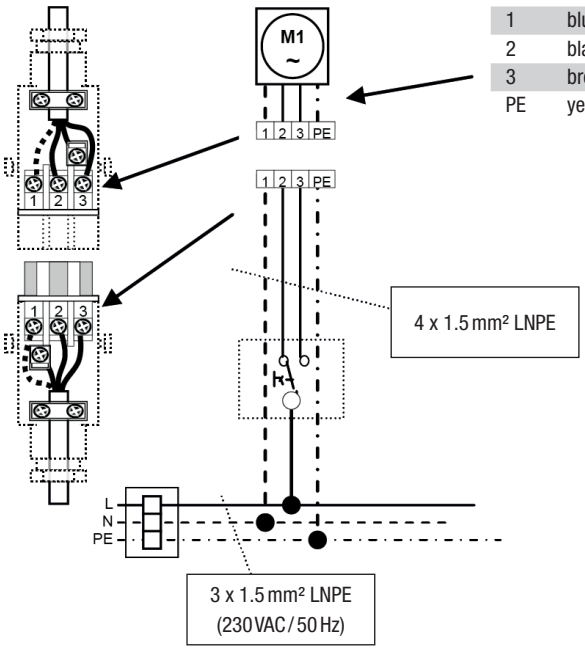

1	blue	neutral
2	black	up or down
3	brown	up or down
PE	yellow / green	earth

 All rights for technical modification are reserved © STOBAG 2024-06

Connection Somfy engines

Safety instructions

- If it is ascertained that safe operation cannot be guaranteed it must be taken out of service immediately and secured from unintentional operation.
- The electric installation on site must be undertaken by authorized electricians.
- Set up electric connections in such a way that they are always **accessible and can be switched off.**
- Wiring work must be performed with the power disconnected.
- The stipulated protection class is only featured for undamaged and complete housing.
- Local regulations must be observed.

 All rights for technical modification are reserved © STOBAG 2024-06